

TRANSITION LEVEL by ATC
TRANSITION ALTITUDE 7000

GENEVA LSGG
STAR RWY 04 - RNAV
BENOT - ULMES


- Set transponder on code 7600.
- Proceed direct to GVA at last assigned and acknowledged FL.
- Descend to FL100 in the GVA HLDG pattern (If already below FL100, climb to FL100 and proceed to GVA).
- Leave GVA HLDG at FL100 and proceed either to SPR or PAS according to RWY in use.
- Maintain FL100 until passing SPR/PAS.
- Carry out a standard instrument approach according to IAC.
- For ACFT equipped with onboard telephone, dial +41 22 798 7600 and mention last RTF channel used.

6° 30'

VAR 2° E 2018.5

BEARINGS, TRACKS AND RADIALS ARE MAGNETIC
DISTANCES IN NM
ALTITUDES IN FT


MSA GVA
Outer Circle: 25 NM GVA
Inner Circle: 10 NM GVA

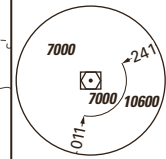

Below FL100 MAX IAS 250kt or as requested by ATC.

P-RNAV or RNAV 1
Certification required.
GNSS required.

RMK: No turn onto base unless CLR by ATC.

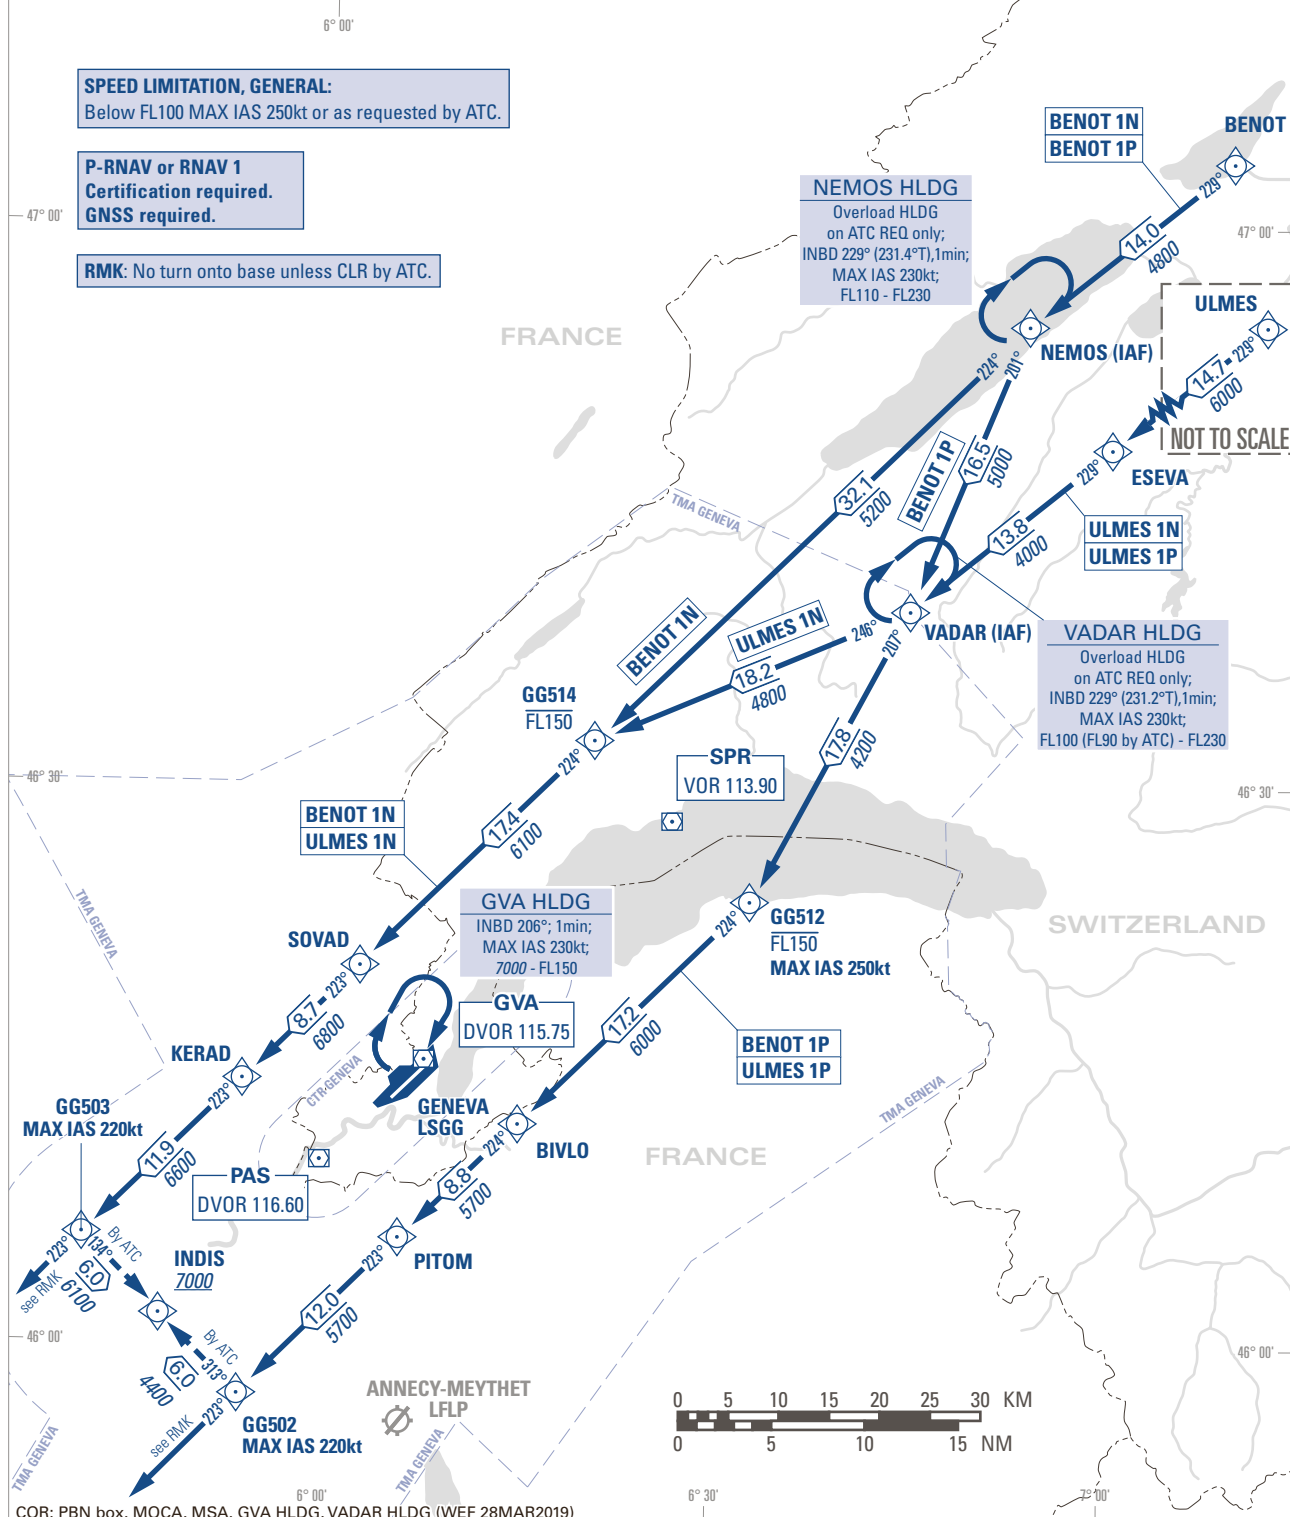

COR: PBN box, MOCA, MSA, GVA HLDG, VADAR HLDG (WEF 28MAR2019)

THIS PAGE INTENTIONALLY LEFT BLANK